


»» Changing air bellow of axle lift



INTRODUCTION

- » Changing disc brake
- » Changing hub unit
- » Changing brake pads
- » Changing ABS
- » Changing brake callipers
- » Changing air spring
- » Changing clamping attachment
- » Changing air bellows
- » Changing brake cylinders
- » Changing shock absorbers
- » **Changing air bellow of axle lift**
- » Changing silent block of air spring

INTRODUCTION

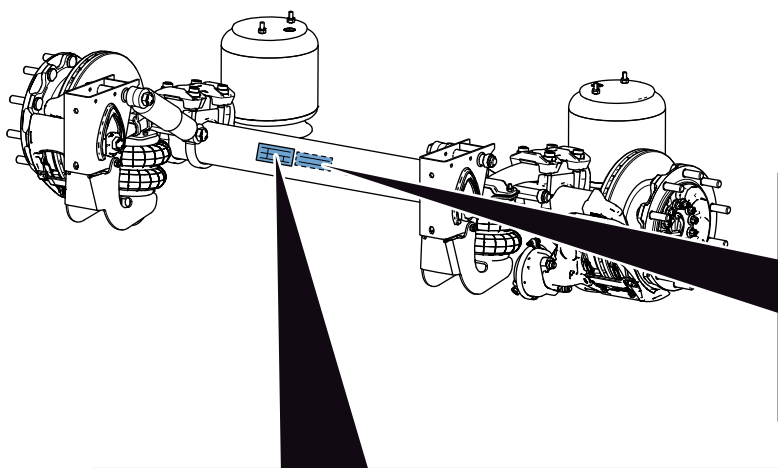

Ident No: 11010031 / D14210157



DOKTX1 09010 4345H1 2040 1300 B22ABS

ID1- 225

ID2- 4345HT

ID3- 10006,2

ID4- 36107313

stat. axle load

9.000 kg


v max

105 km/h




Made exclusively for KRONE by gigant-Trenkamp & Gerle GmbH, 49413 Dinklage, GERMANY
A member of the **KRONE** - Group

D =

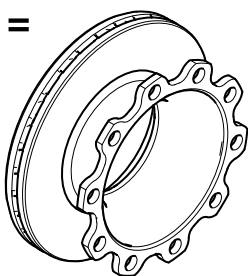


9 t =

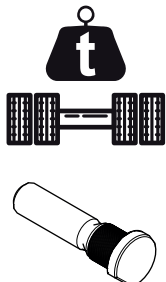


10 x

430 x 45

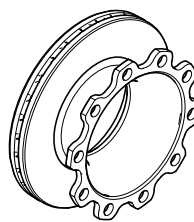



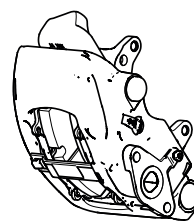






 



H1 = Haldex






INTRODUCTION





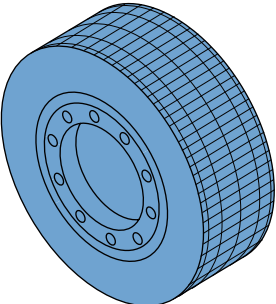





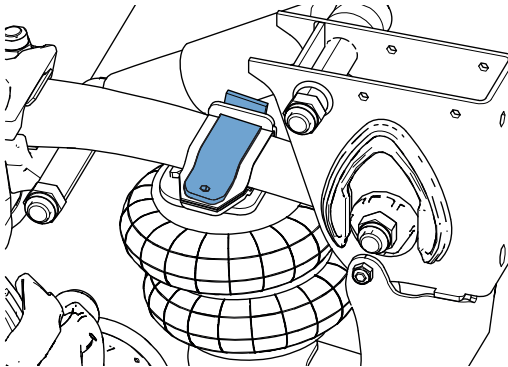

	Take notes!	
	Follow the safety instructions!	
	Attention!	
	Caution: heavy; handle properly.	
	Always wear the necessary safety equipment!	
	Always wear the necessary safety equipment!	
	Always wear the necessary safety equipment!	
	Only use tested and approved tools.	
	Follow instructions of the manufacturer!	
	axle load	
	Remove part and put it aside!	
	good	
	bad	
	O.k.	

INTRODUCTION








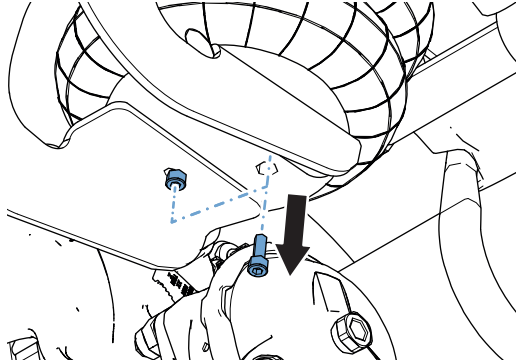


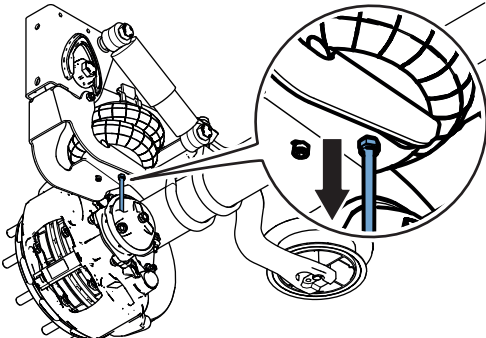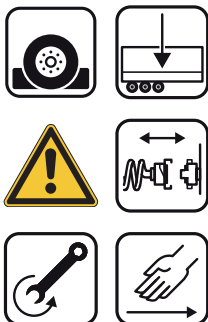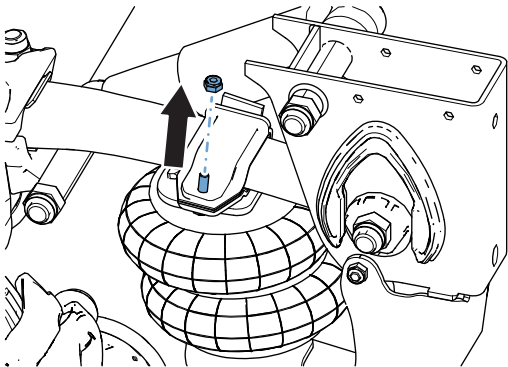
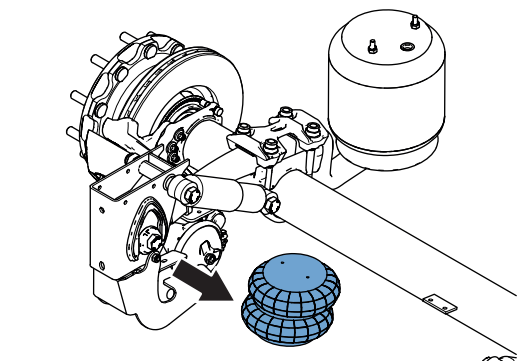



	Use new component.	
	Loosen with tool!	
	Tighten with tool!	
	Tighten with required tightening torques!	
	Take something in by hand.	
	Take something out by hand.	
	clean	
	Dispose properly.	
	Check / inspect visually!	
	Lower the trailer.	
	Lift and lower the trailer.	
	Secure the trailer against rolling away!	
	Disconnect compressed air supply of trailer.	

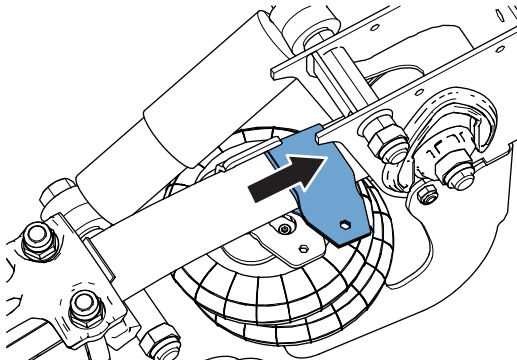1		 	
---	---	---	--

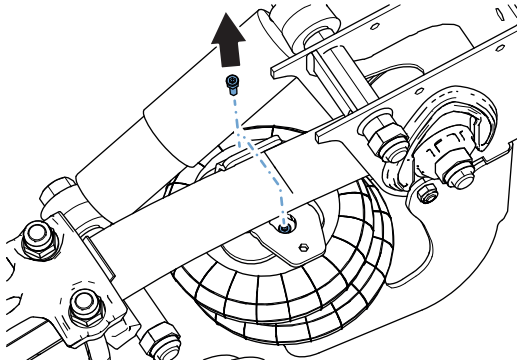











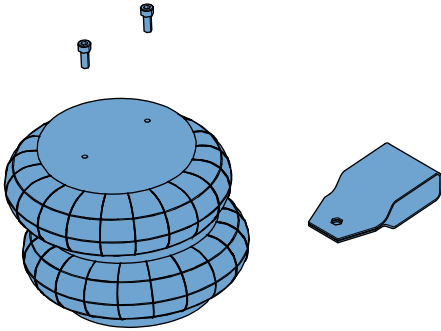

CHANGING AIR BELLOW OF AXLE LIFT

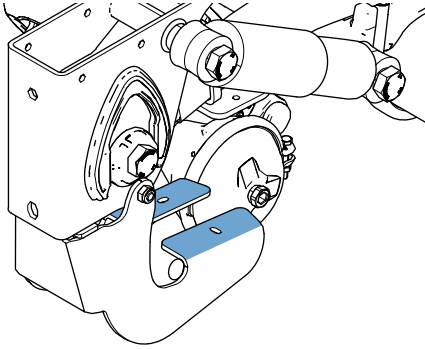    		
1	 	
2	 	
3	 	

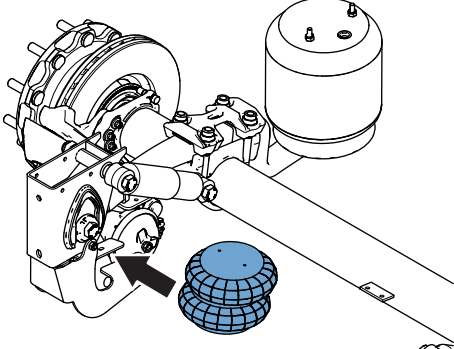


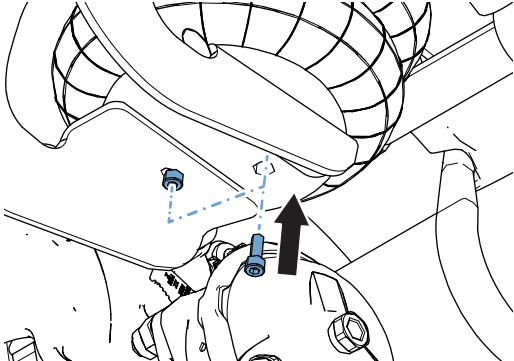









CHANGING AIR BELLOW OF AXLE LIFT

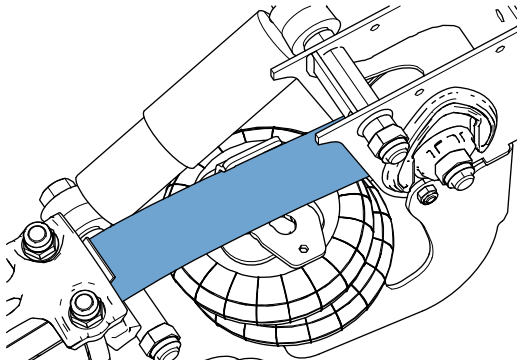4		 	
5		  	
6		  	
7		  	

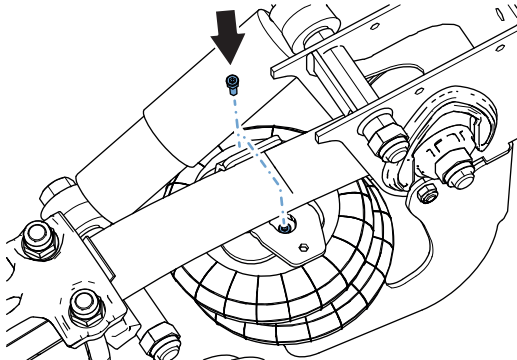

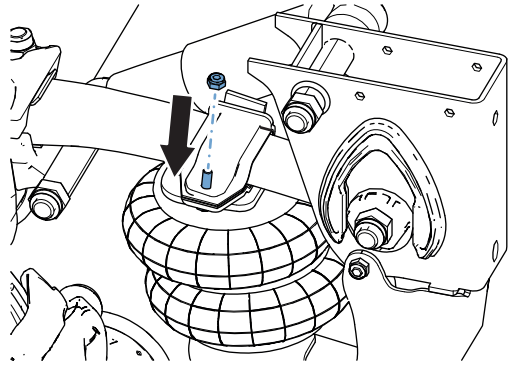




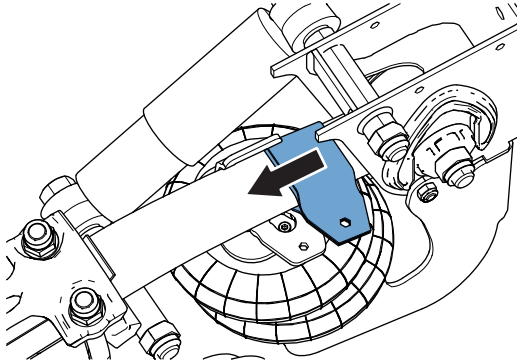


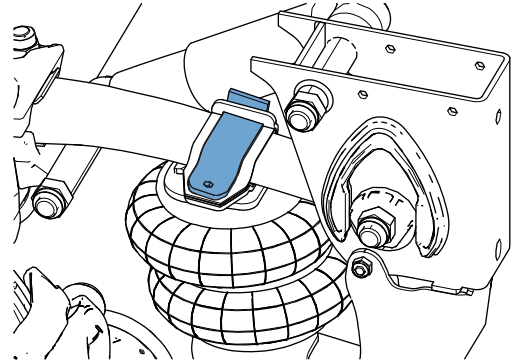
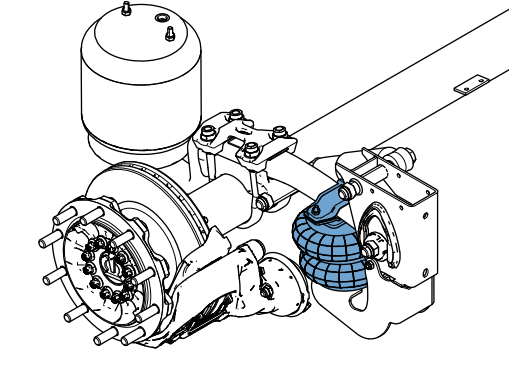



CHANGING AIR BELLOW OF AXLE LIFT

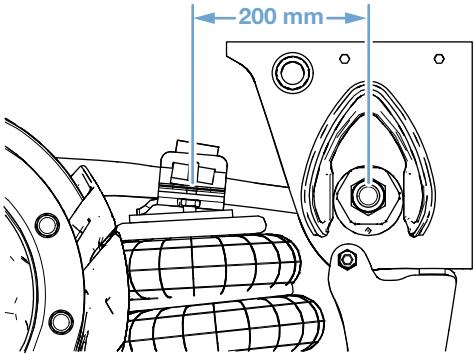8		 	
9		 	
10		 	
11		  	 25 Nm

CHANGING AIR BELLOW OF AXLE LIFT

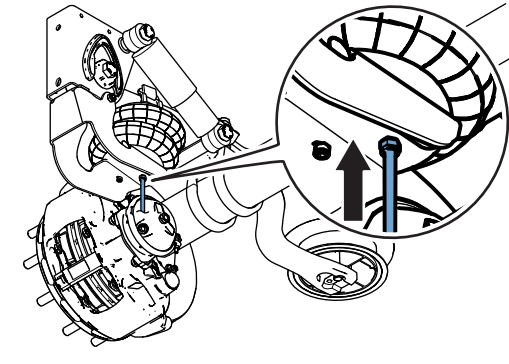12		 	
13		  	 25 Nm
14		 	
15			

CHANGING AIR BELLOW OF AXLE LIFT

16			
17		  	 45 Nm
18		  	
19		  	

CHANGING AIR BELLOW OF AXLE LIFT



Your KRONE contact person

FAHRZEUGWERK BERNARD KRONE GMBH

Bernard-Krone-Straße 1, 49757 Werlte, Germany

Phone: +49 (0) 5951 / 209-0, Fax: +49 (0) 5951 / 24 65

info.nfz@krone.de, www.krone-trailer.com