

Changing brake pads








- Changing disc brake
- Changing hub unit
- Changing brake pads
- Changing ABS
- Changing brake callipers
- Changing air spring
- Changing clamping attachment
- Changing air bellows
- Changing brake cylinders
- Changing shock absorbers
- Changing air bellow of axle lift
- Changing silent block of air spring



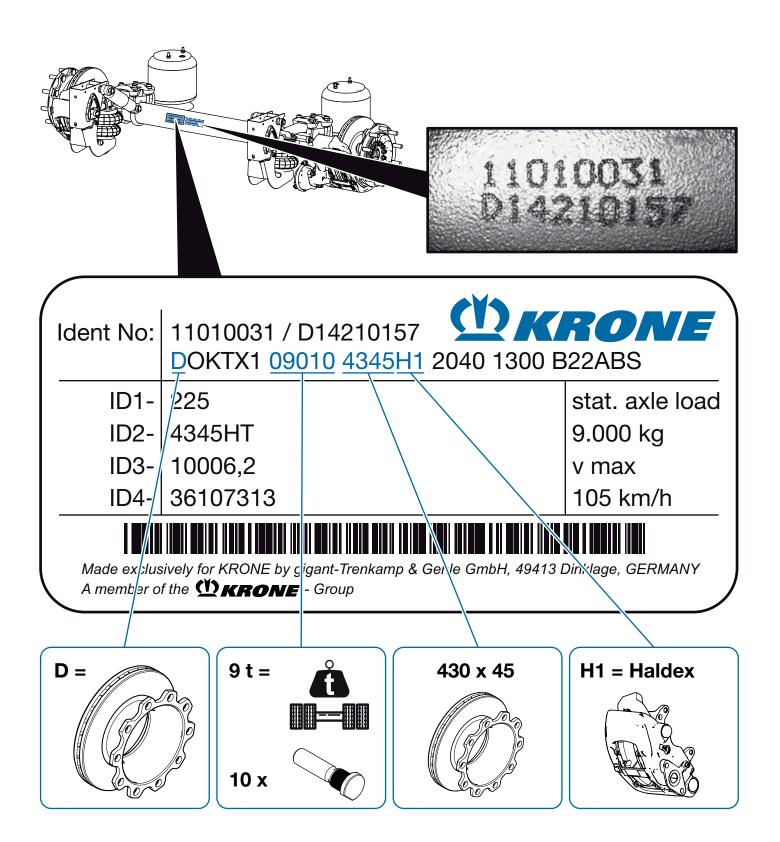



	Take notes!	
SAFETY	Follow the safety instructions!	
	Attention!	
	Caution: heavy; handle properly.	
	Always wear the necessary safety equipment!	
	Always wear the necessary safety equipment!	
	Always wear the necessary safety equipment!	
	Only use tested and approved tools.	
	Follow instructions of the manufacturer!	
	axle load	
A	Clicking noise is heard.	
	good	
X	bad	
	O.k.	





	Use new component.	
	Loosen with tool!	
Nm	Tighten with required tightening torques!	
	Push until stop!	
	loosen	
	tighten	
	Take something in by hand.	
	Take something out by hand.	
	Don't use impact wrench!	
	Dispose properly.	
	Check / inspect visually!	
	Check brake at brake test stand.	
	Lift axle with hydraulic jack.	
	Secure the trailer against rolling away!	


INTRODUCTION


	Disconnect compressed air supply of trailer.	
\bigcirc	Turn clockwise.	
	Turn counterclockwise.	
	Remove part and put it aside!	
?	possible helping tool	




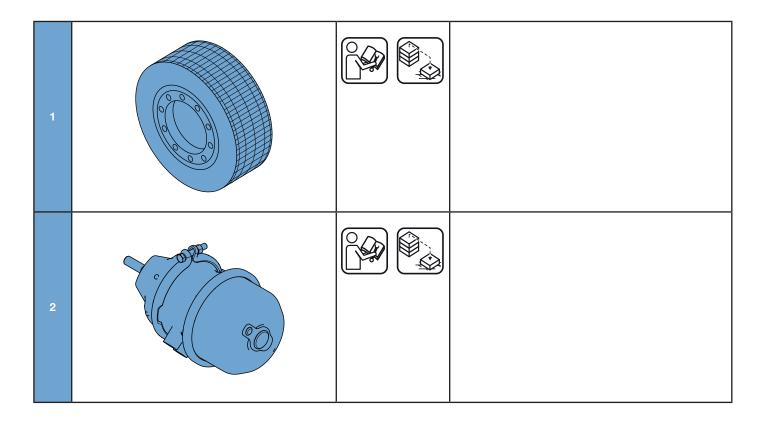


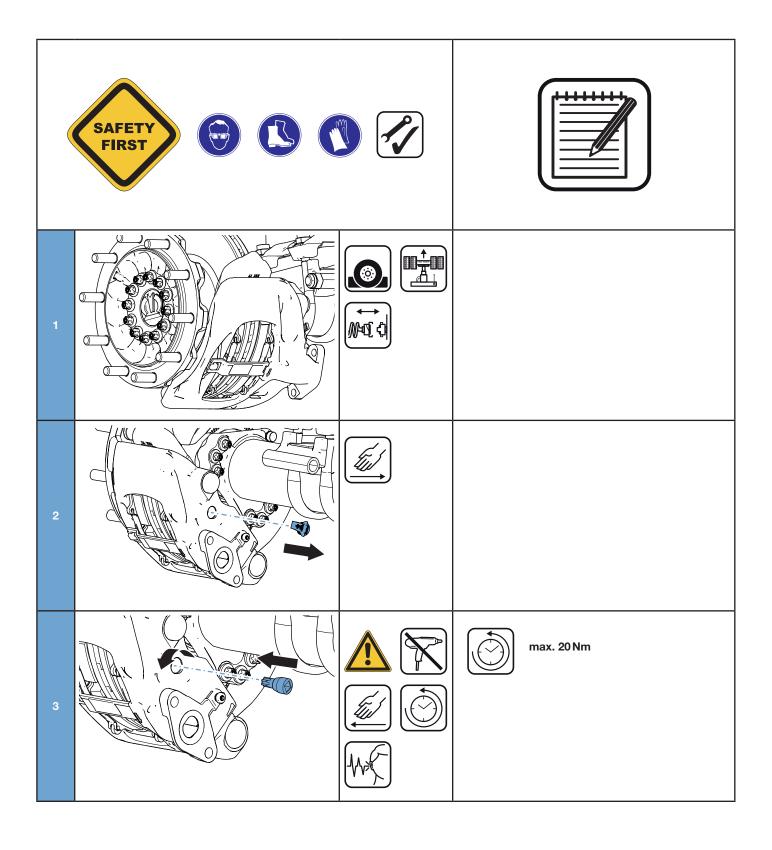

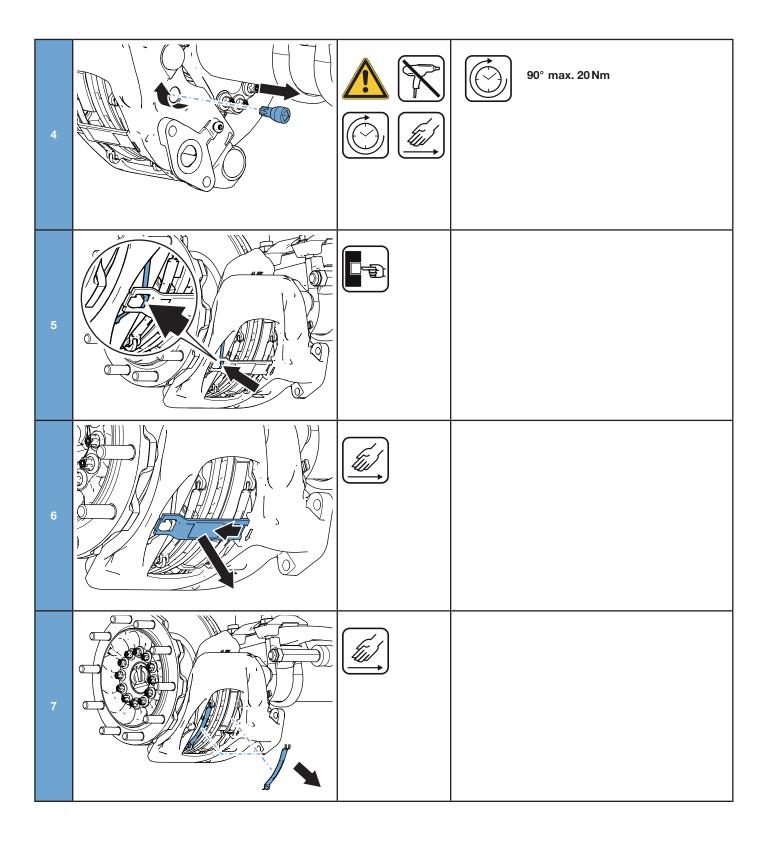

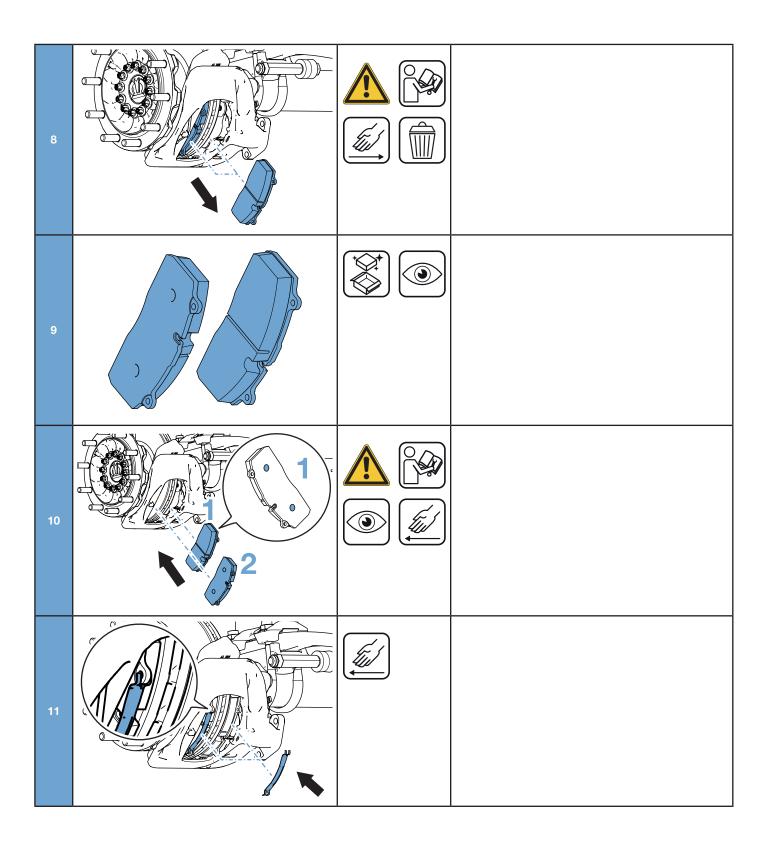

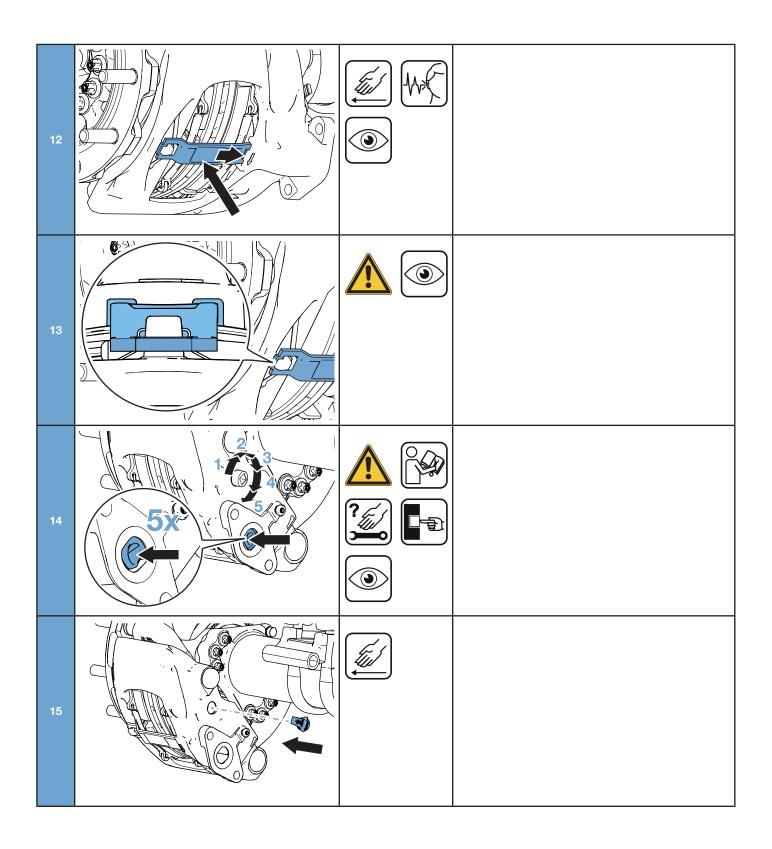

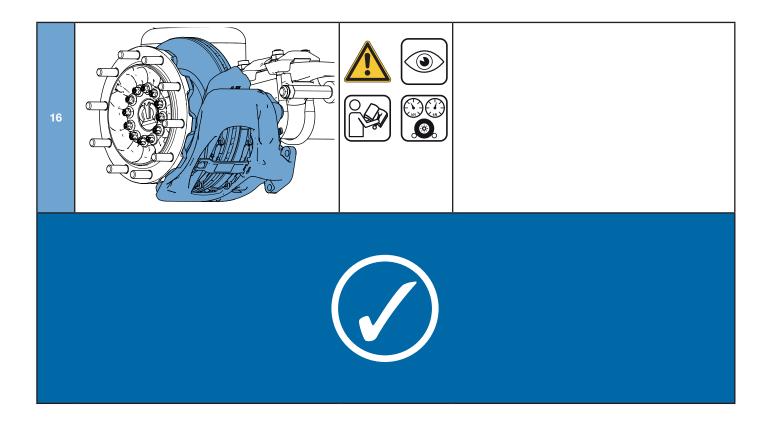

Your KRONE contact person

FAHRZEUGWERK BERNARD KRONE GMBH

Bernard-Krone-Straße 1, 49757 Werlte, Germany Phone: +49 (0) 5951 / 209-0, Fax: +49 (0) 5951 / 24 65 info.nfz@krone.de, www.krone-trailer.com