

Changing clamping attachment








INTRODUCTION

- Changing disc brake
- Changing hub unit
- Changing brake pads
- Changing ABS
- Changing brake callipers
- Changing air spring
- Changing clamping attachment
- Changing air bellows
- Changing brake cylinders
- Changing shock absorbers
- Changing air bellow of axle lift
- Changing silent block of air spring

INTRODUCTION

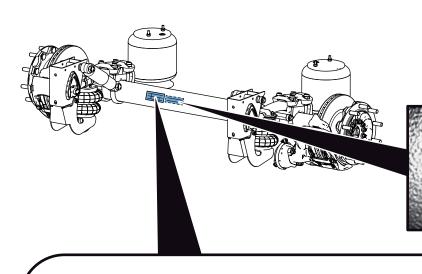



Ident No: 11010031 / D14210157

DOKTX1 09010 4345H1 2040 1300 B22ABS

ID1- 225

ID2- 4345HT

ID3-/ 10006,2

ID4-/ 36107313

stat. axle load


9.000 kg

v max

105 km/h




Made explusively for KRONE by gigant-Trenkamp & Gelle GmbH, 49413 Dinklage, GERMANY A member of the **WKRONE** - Group

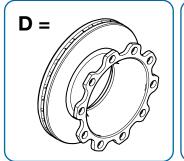

9 t = 10 x



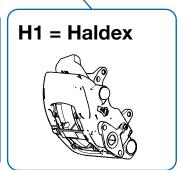

INTRODUCTION

	Take notes!	
SAFETY	Follow the safety instructions!	
	Attention!	
	Caution: heavy; handle properly.	
	Always wear the necessary safety equipment!	
	Always wear the necessary safety equipment!	
	Always wear the necessary safety equipment!	
	Only use tested and approved tools.	
	Follow instructions of the manufacturer!	
Å	axle load	
	spring distance	
	good	
X	bad	
	O.k.	

	Use new component.	
	Loosen with tool!	
Nm	Tighten with required tightening torques!	
300	Tighten the bolts crosswise!	
	Carefully force in or out using a hammer.	
	Take something in by hand.	
	Take something out by hand.	
	Remove part and put it aside!	
	Dispose properly.	
	Check / inspect visually!	
	Check brake at brake test stand.	
	Adjust the axle track according to the manufacturer's instructions.	
1	Lift and lower the trailer.	
	Lift axle securely with hydraulic jack.	

*	Lower axle with hydraulic jack.	
	Prop up with chassis stand.	
	Secure the trailer against rolling away!	

