


»» Changing air bellows



INTRODUCTION

- » Changing disc brake
- » Changing hub unit
- » Changing brake pads
- » Changing ABS
- » Changing brake callipers
- » Changing air spring
- » Changing clamping attachment
- » **Changing air bellows**
- » Changing brake cylinders
- » Changing shock absorbers
- » Changing air bellow of axle lift
- » Changing silent block of air spring

INTRODUCTION

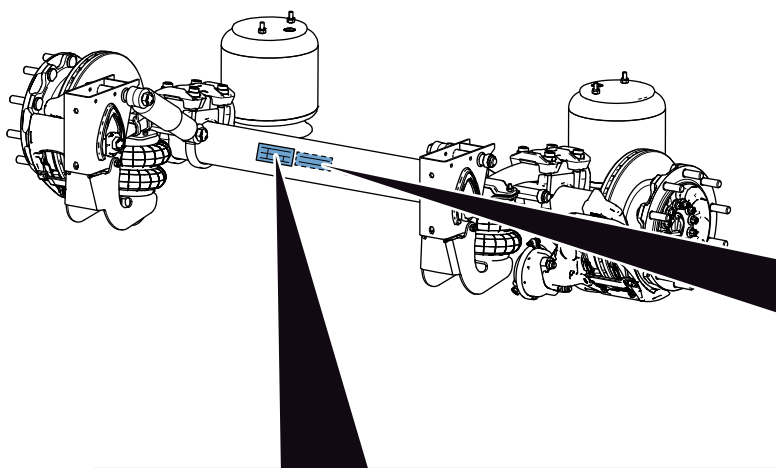

Ident No: 11010031 / D14210157



DOKTX1 **09010** **4345H1** 2040 1300 B22ABS

ID1- 225

ID2- 4345HT

ID3- 10006,2

ID4- 36107313

stat. axle load

9.000 kg


v max

105 km/h




Made exclusively for KRONE by gigant-Trenkamp & Gerle GmbH, 49413 Dinklage, GERMANY
A member of the **KRONE** - Group

D =

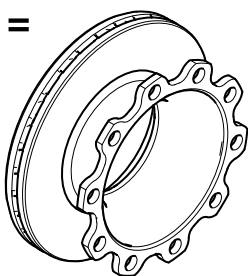


9 t =

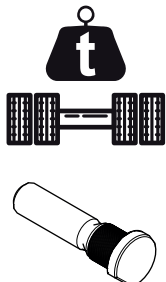


10 x

430 x 45

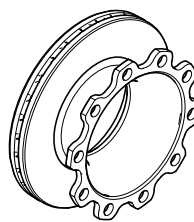



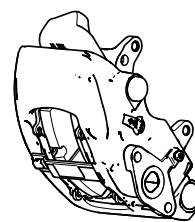






 
 


H1 = Haldex






INTRODUCTION





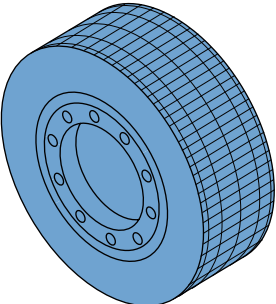












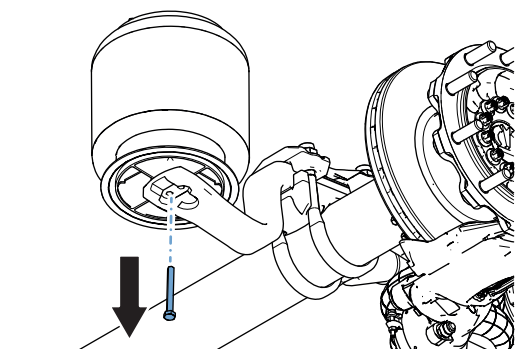


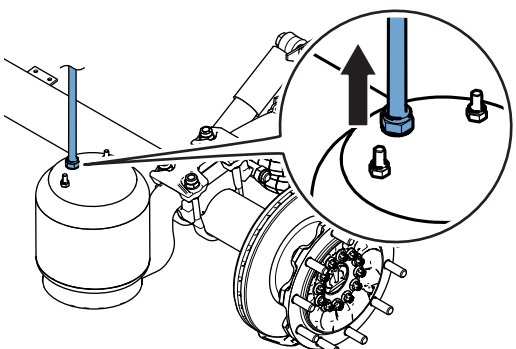
	Take notes!	
	Follow the safety instructions!	
	Attention!	
	Caution: heavy; handle properly.	
	Always wear the necessary safety equipment!	
	Always wear the necessary safety equipment!	
	Always wear the necessary safety equipment!	
	Only use tested and approved tools.	
	Follow instructions of the manufacturer!	
	axle load	
	Remove part and put it aside!	
	good	
	bad	
	O.k.	

INTRODUCTION




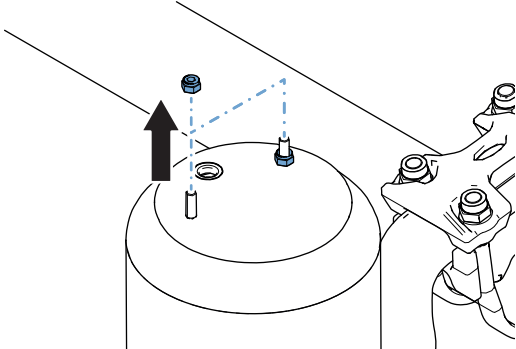




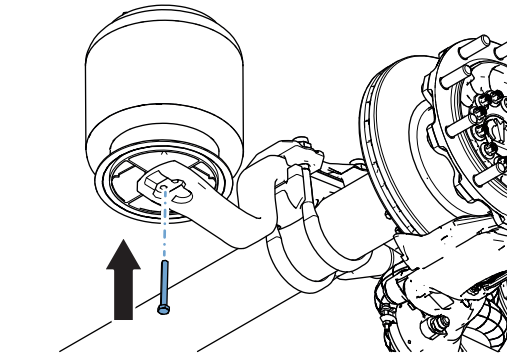




	Use new component.	
	Loosen with tool!	
	Tighten with tool!	
	Tighten with required tightening torques!	
	Take something in by hand.	
	Take something out by hand.	
	Dispose properly.	
	Check / inspect visually!	
	Lower the trailer.	
	Lift and lower the trailer.	
	Lift axle with hydraulic jack.	
	Secure the trailer against rolling away!	
	Disconnect compressed air supply of trailer.	

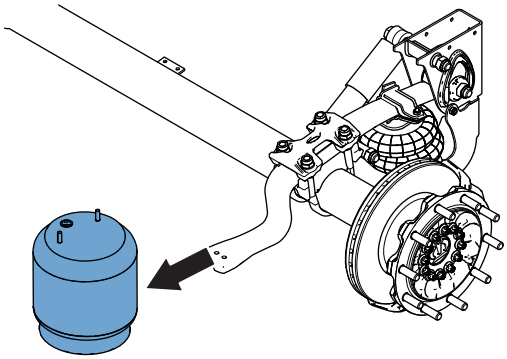1		 	
---	---	---	--

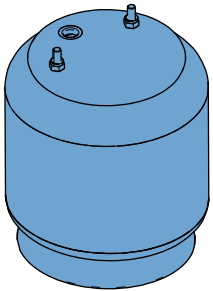


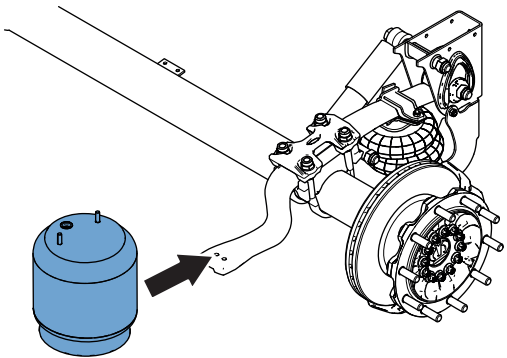







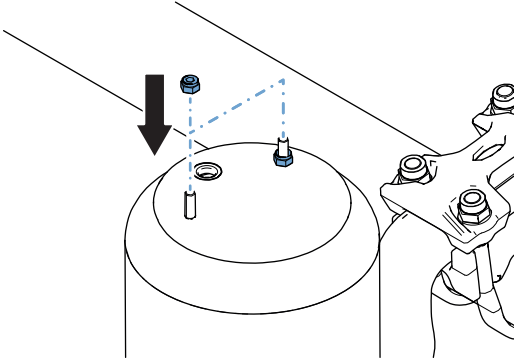

CHANGING AIR BELLOWS

<div>      </div>		
1	 <div>       </div>	
2	 <div>    </div>	
3	 <div>    </div>	

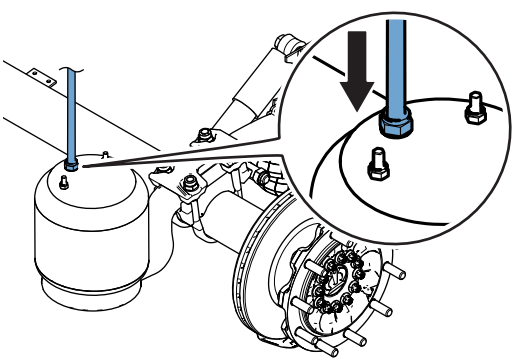CHANGING AIR BELLOWS

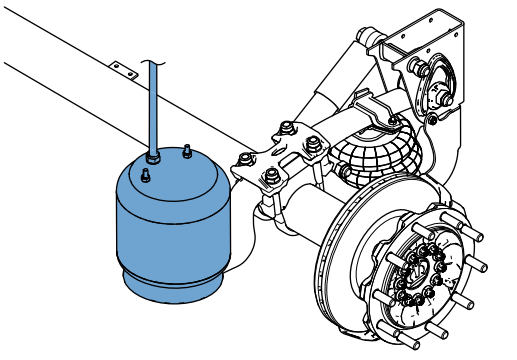4		 	
5		 	
6			
7		  	 <p>55 Nm \pm 5 Nm</p>

CHANGING AIR BELLOWS

8		  	 <p>75–80 Nm</p>
9		 	
10		  	
			

Your KRONE contact person

FAHRZEUGWERK BERNARD KRONE GMBH

Bernard-Krone-Straße 1, 49757 Werlte, Germany

Phone: +49 (0) 5951 / 209-0, Fax: +49 (0) 5951 / 24 65

info.nfz@krone.de, www.krone-trailer.com